




Quick manual NFC Wash

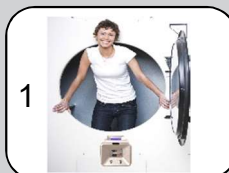

1 Fill the washing machine / dryer and choose the program you would like to use.



2 Choose your device (machine or dryer) at the cash system. For that press the blue button until the name of the device you use is visible in the display.



3 Confirm the device with the green button.



4 Afterwards you can see the costs for the program. If the blue button still lights you can choose other things.



5 To confirm press the green button and the final price is shown.



6 Afterwards hold the card or the topped up chip to the blue shining NFC symbol. The amount is then deducted from your account of the prepaid account.

Please start the device withing the next 2 minutes!